



Accessories



台州市椒江柏森机械有限公司
Taizhou Bison Machinery Co.,Ltd

GASOLINE GENERATOR PARTS

BS950



曲轴箱 (左)
Left Crank case



曲轴箱 (右)
Right Crank case



曲轴
Crank shaft



电机端盖
Rear cover



气缸盖
Cylinder head



滑套
Slip ring



调速叉
Speed regulating fork



活塞
Piston



消声器
Muffler



点火器
Ignitor



T型插座
T Receptacle



内螺纹油开关
Fuel control valve



点火线圈
Ignitor coil



过流保护器
Overload protector



滤网
Fuel filter



电容器 (12 μ F/13.5 μ F/16 μ F/12 μ F)
Capacitor (12 μ F/13.5 μ F/16 μ F/12 μ F)



油封 ϕ 20
Oil seal ϕ 20



油封 ϕ 6
Oil seal ϕ 6



防震脚
Shockproof foot



滚针轴承(小)
Needle bearing (small)



调速压簧
Governing spring



调速拉杆
Governing rod



深沟球轴承6004
Bearing 6004



化油器
Carburetor





小套筒
Small sleeve



圆油位表
Oil gage



工具包
Tool



手柄
Handle starter



拉盘
Recoil starter assembly



叉型电源线
Power lead (X type)



T型电源线
Power lead (T type)



一体式点火器
Integral ignitor



纸垫片(缸头)
Paper gasket (cylinder head)



GASOLINE GENERATOR PARTS

BS1500A, BS1500T 1000W 汽油发电机配件




箱体
Crank case



箱盖(低)
Crankcase cover (low)



拉盘(塑)
Recoil starter assembly(plastic)

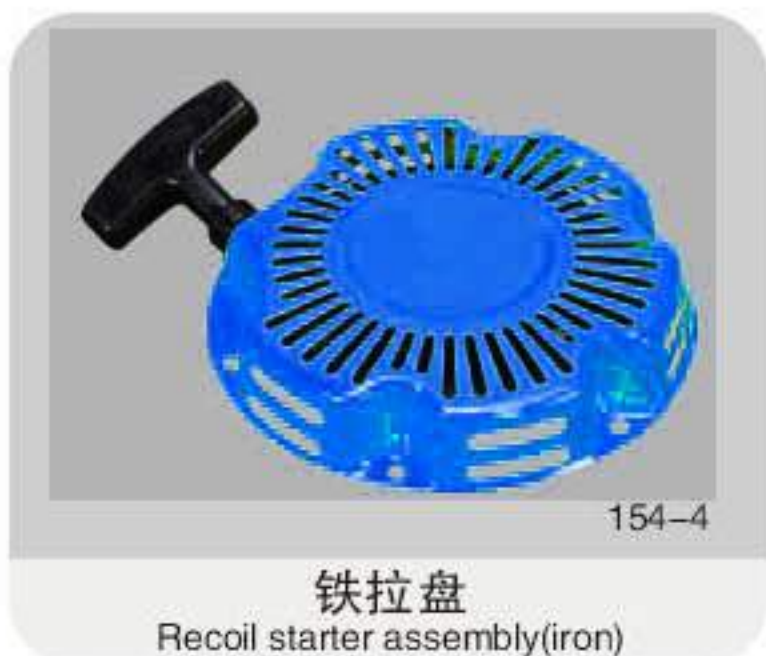

铁拉盘
Recoil starter assembly(iron)



气缸盖罩
Cylinder head cover



摇臂组件
Rocker arm



电机支架(无刷)
Bracket (without brushes)



前端盖
Crankcase cover (high)



导风罩
Wind scooper



曲轴
Crankshaft



气缸盖
Cylinder head



防震脚
Shockproof foot



空滤器
Air cleaner



化油器
Carburetor



铁凸轮轴
Camshaft assembly (iron)



活塞
Piston




启动盘(塑爪)
Starting tray





154-58

推杆
Push rod

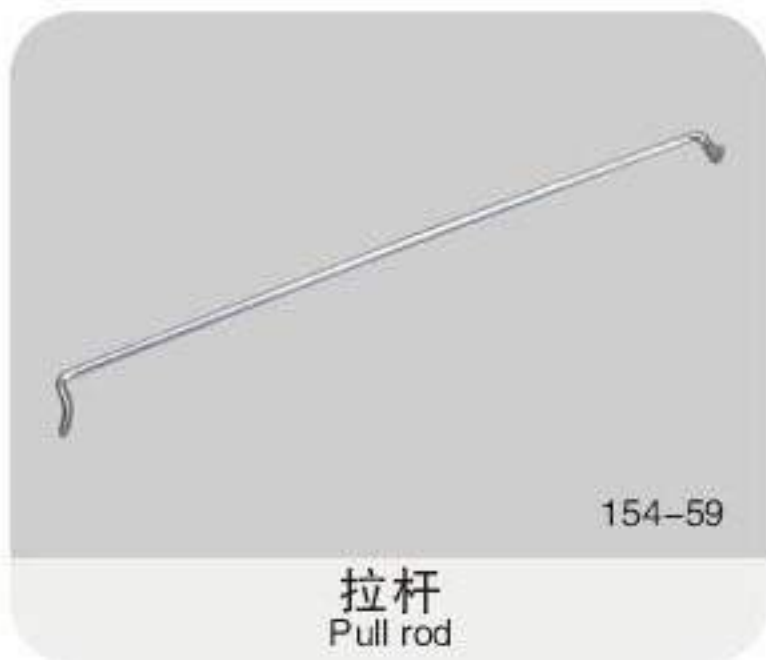

154-59

拉杆
Pull rod



154-60

塑料凸轮轴
Cam shaft (Plastic)



154-61

挡油板
Oil baffle pate



154-62

气缸垫片
Gasket(cylinder head)



154-63

调速轴卡簧
Clip(governor rod)



154-64

摆臂卡簧
Clip(governor arm shaft)



154-65

调速弹簧
Spring(spring regulation)



154-66

油箱
Fuel tank



154-67

风扇罩
Fan case



154-68

转子
Rotor



154-69

定子
Stator



154-70

箱体高盖
Crank case cover (high)



154-71

滑套
Governor slider

⚡ GASOLINE GENERATOR PARTS

BS2500DC, BS2500B, BS2500Y, BSWP30

GASOLINE PUMP PARTS 汽油机水泵配件 汽油发电机配件




168-1

箱体
Crank case



168-2

气缸盖
Cylinder head

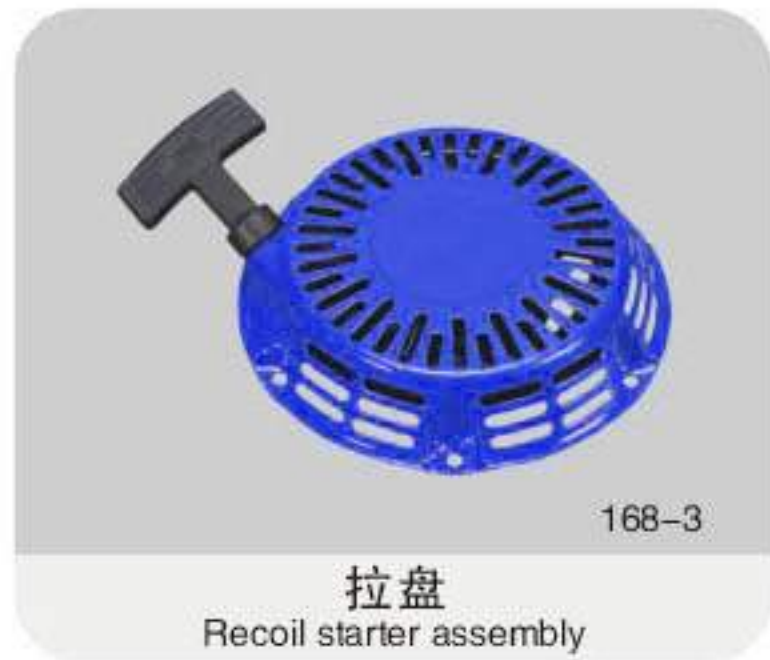

168-3

拉盘
Recoil starter assembly



168-4

箱盖(高)
Crank case cover (high)







 168-86 启动盘 (铁爪) Starter pulley(iron)	 168-87 启动盘 (塑爪) Starter pulley(Plastic)	 168-88 继电器 Relay	 168-89 防震脚 Shockproof foot	 168-90 电瓶 7 AH Battery 7 AH
 168-91 轮子 Wheel	 168-92 电机后罩 Rear cover	 168-93 轮子轴 Wheel shaft	 168-94 方油位表 Fuel level gauge	 168-95 塑料压板 Hold-down plate(Plastic)
 168-96 压板 (铁) Hold-down plate(iron)	 168-97 压板螺丝 Screw	 168-98 塑料挡块 Plastic block	 168-99 压板卡簧 Clip	 168-100 电桥 Electrical bridge
 168-101 卷簧 Pawling spring (starter)	 168-102 拉绳 Rope	 168-103 卷轮 Drum wheel	 168-104 进出水口垫片 Gasket of water inlet / outlet	 168-105 进水口 Water inlet
 168-106 气门弹簧 Spring (valve)	 168-107 导向板 Plate push rod guide	 168-108 隔热板 Heat insulation	 168-109 油封 Oil seal	 168-110 进水滤网 Inlet strainer
 168-111 化油器垫片 Gasket (carburetor)	 168-112 空滤器垫片 Gasket (air cleaner)	 168-113 出水口密封垫片 Gasket(water outlet)	 168-114 汽缸盖罩垫片 Gasket(cylinder cover)	 168-115 水泵化油器 Pumps Carburetor
 168-116 进出水口接口 Joint(water inlet outlet)	 168-117 堵塞 Blocker	 168-118 泵体座 Pump seat	 168-119 动力油箱 Engine fuel tank	 168-120 进出水口接头 Joint(water inlet outlet)
 168-121	 168-122	 168-123	 168-124 水封垫片 Gasket(water envelop)	 168-125 水泵调速架 Control assembly
			 168-126 进出水口紧固螺丝 Fixing screws of water inlet / outlet	



GASOLINE GENERATOR PARTS **BS2500YM** 汽油发电机配件





GASOLINE GENERATOR PARTS

BS2500SM 2000W / BS3500VT 2500W

汽油发电机配件







188-64

导向板 (带塑料)
Plate push rod guide with plastic



188-65

空滤器
Air cleaner



188-66

充电线圈
Charging coil



188-67

活塞环总成
Piston ring set



188-68

平衡轴
Balance shaft



188-69

高压包
High voltage set



188-70

摇臂
Rocker arm



188-71

摇臂螺栓
Rocker arm bolt



188-72

锁紧螺母
Nut



188-73

顶帽
Top cap



188-74

摆杆卡簧
Clip(governor arm shaft)



188-75

弯通气管
Ventiduct



188-76

盖盘
Drive plate



188-77

调速轴
Governor rod



188-78

火花塞
Spark plug




188-79

气门弹簧
Spring (valve)



188-80

微调拉簧
Spring (pull rod)

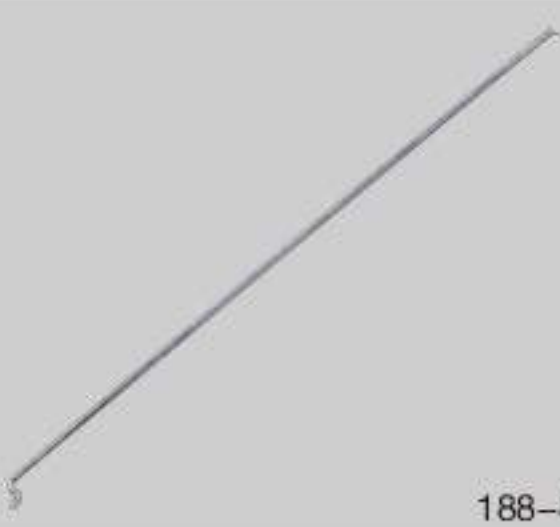

188-81

调速拉杆
Pull rod



188-82

电机消音器
Motor muffler




188-83

转子
Rotor



188-84

定子
Stator

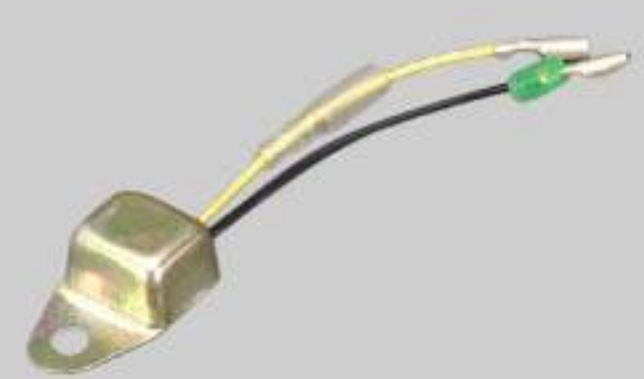

188-85

机油放大器
Oil protector



188-86

挺柱
Valve lifter



188-87

调速臂
Governor arm



188-88

卷簧
Pawling spring starter



188-89

起动器总成
Recoil starter assembly



188-90

网条
Steel mesh



188-91

压线板
Pressing line plate



188-92

风扇罩
Fan case



188-94

防震脚
Shockproof foot



188-95

消声器支架
Bracket(muffler)



188-96

螺杆垫圈
Screw washer



188-97

188水泵消清器
Water pump muffler



188-93

油箱
Fuel tank



DIESEL GENERATOR PARTS

BS3500DSE, BS3500DCE 3000W

柴油发电机配件



186-1

箱体
Crank case



186-2

箱盖(低)
Crankcase cover(low)



186-3

油门支架(动力)
Bracket(accelerograph)



186-4

气缸盖罩(FA)
Cylinder cover



186-5

进气管 (186)
Intake pipe



186-6

空滤器 (186)
Air cleaner



186-7

空滤器 (186) 静音
Air cleaner(Silent)



186-8

消声器(静音)
Muffler(Silent)



186-9

活塞 (186)
Piston 186



186-10

起动轂 (186)
Starter pulley



186-11

滤芯 (186)
Filter element



186-12

平衡轴
Balance shaft



186-13

拉盘
Recoil starter assembly



186-14

消声器(带架)
Muffler



186-15

曲轴
Crankshaft



186-16

滤芯(170、178)
Filter element(170、178)



186-17

飞轮齿圈
Gear(fly wheel)



186-18

柴油滤 (带架)
Fuel filter(whth bracket)



186-19

柴油滤 (静音)
Fuel filter(silent)



186-20

稳压器
Regulator



186-21

曲轴瓦
Main bearing shell



186-22

机油报警器(双极)
Oil alert (doublepole)



186-23

飞轮发电机
Magnet




186-24




油泵带电磁阀
Oil pump with electromagnetic valve




186-25

气缸盖垫片(0.1-0.5mm)
Gasket(cylinder cover)

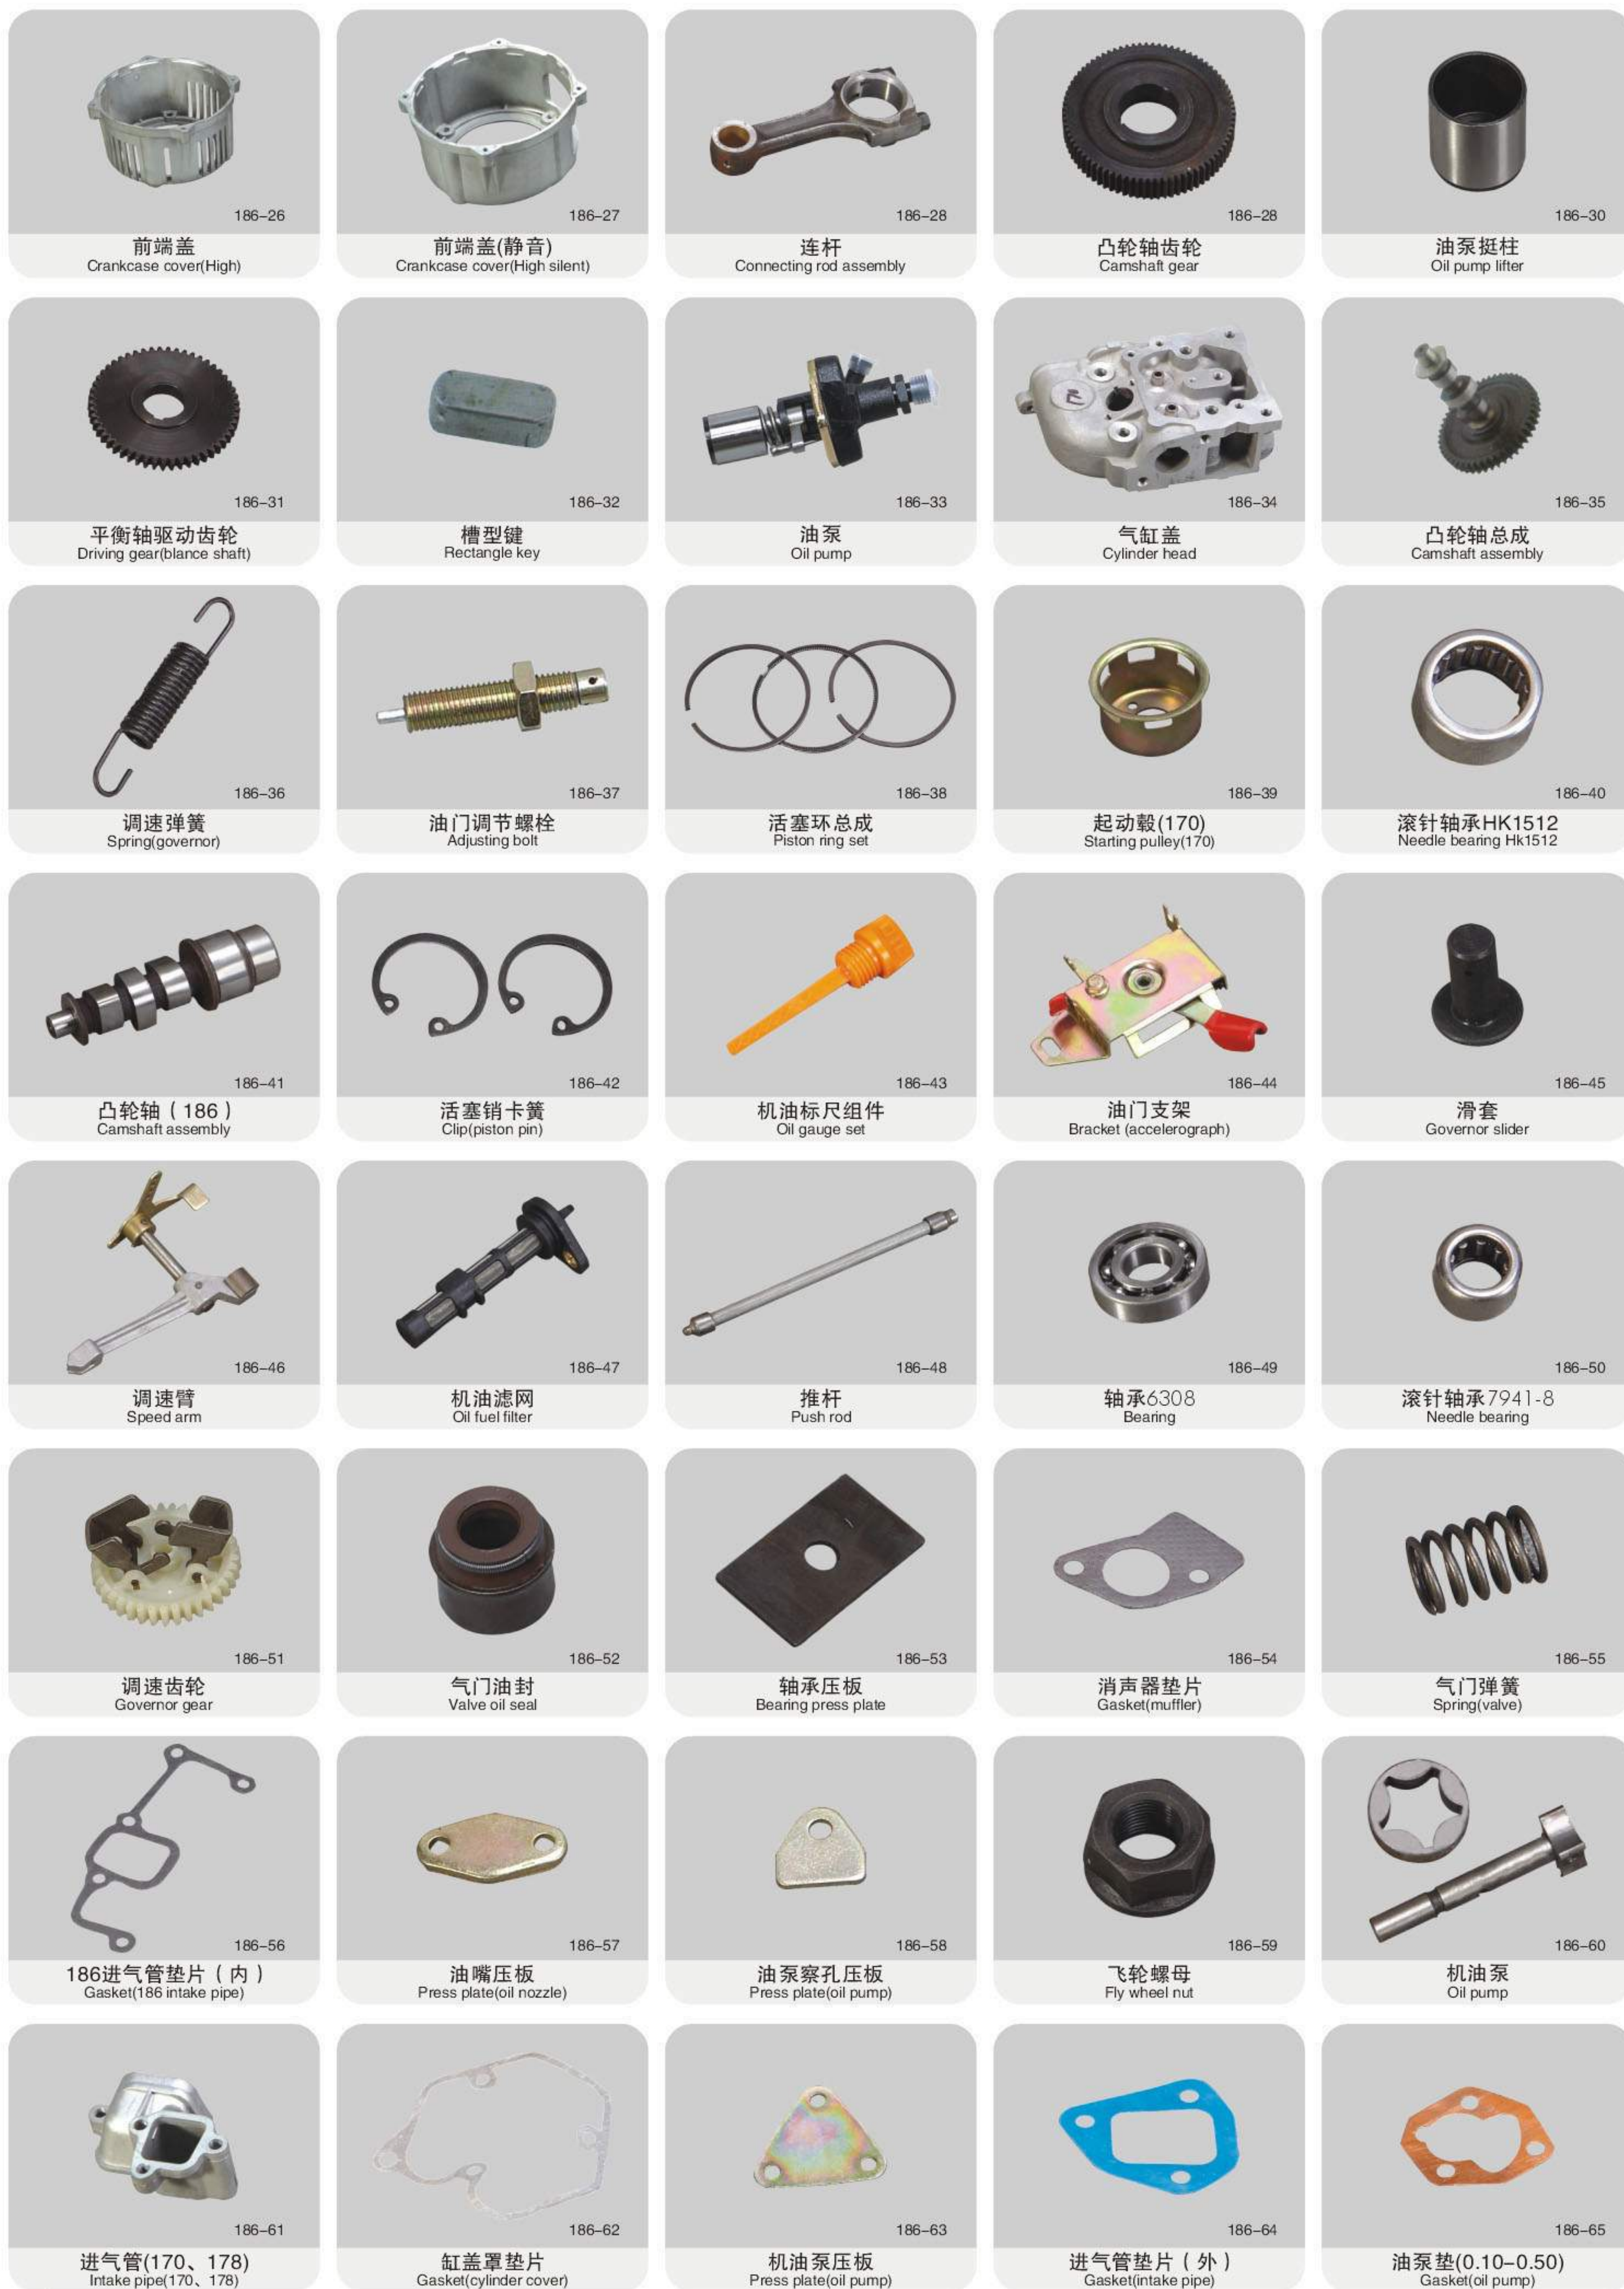

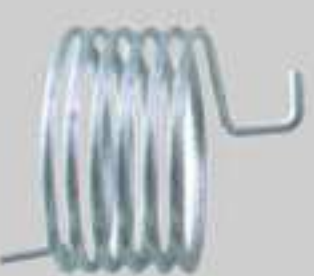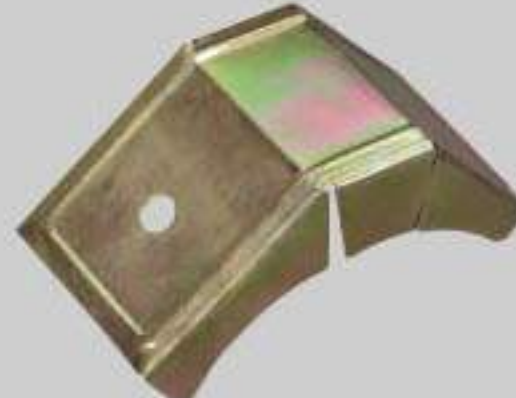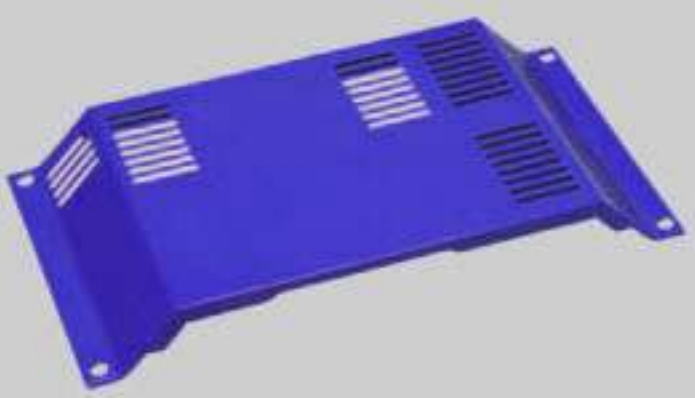 186-66 平衡轴 (170) Balance shaft(170)	 186-67 空滤器(170、178) Air cleaner(170、178)	 186-68 调速连杆拉簧 Speed adjusting spring	 186-69 缸盖螺母 (厚) (薄) Nut(cylinder cover)	 186-70 减压回位弹簧 Back spring
 186-71 消声器 (178带架) Muffler(178 with frame)	 186-72 飞轮 Fly wheel	 186-73 底盘轮子 Wheel	 186-74 油嘴(FA) Oil nozzle	 186-75 风扇罩密封条 Seal strip (fan cover)
 186-76 箱体垫片(铝) (186) Aluminum Gasket(crank case)	 186-77 O型圈 O ring	 186-78 气缸盖罩(170、178) Cylinder cover(170、178)	 186-79 摇臂总成 (186) Rocker arm	 186-128 机油报警器(单极) Oil alert (monopole)
 186-81 活塞销 Piston pin	 186-82 挺柱 Valve lifter	 186-83 油箱开关 Oil switch of fuel tank	 186-84 动力油箱支架 Engine fuel tank bracket	 186-85 起动机 Starting motor
 186-86 连杆瓦 Pull rod case	 186-87 油咀(170、178) Oil nozzle(170、178)	 186-88 观察孔垫片 Gasket	 186-89 摇臂支架 Rocker arm bracket	 186-90 摇臂组件 Rocker arm
 186-91 高压油管(静音186) High pressure oil pipe	 186-92 进排气门 Intake exhaust valve	 186-93 油泵(170、178) Oil pump(170、178)	 186-94 导风罩 Wind scooper(170、178)	 186-95 活塞186 Piston 186
 186-96 气门弹簧上座 Valve spring retainer(up)	 186-97 顶帽 Top cap	 186-98 气门锁夹 Valve lock clamp	 186-99 导风罩 (186) Air scooper	 186-100 风扇罩 Fan cover
 186-101 油箱 Fuel tank	 186-102 防护罩 Protection cover	 186-103 转子 Rotor	 186-104 定子 Stator	 186-105 工具包 Tool

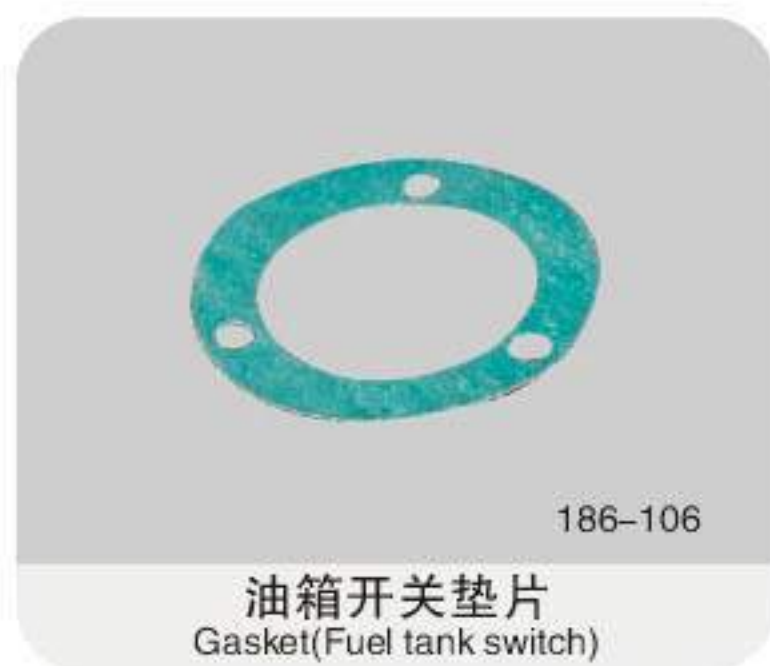

186-106
油箱开关垫片
Gasket(Fuel tank switch)



186-107
消声器垫片2
Gasket(muffler)



186-108
防震脚 (静音)
Shockproof foot(Silent)



186-109
熄火拉线1
Accelerator cable



186-110
电磁铁
Electromagnet



186-111
汽缸盖密封圈
Cylinder cover seal



186-112
机油滤压板
Oil filter press plate



186-113
稳压器支架
Bracket(regulator)



186-114
油封
Oil seal



186-115
减压杆
Depression lever



186-116
油箱开关板 (带架)
Fuel tank switch plate(with bracket)



186-117
外减压手柄
Decompression handle



186-118
消声器波纹管 (静音)
Corrugated pipe



186-119
电瓶
Battery



186-120
定子 (电焊机)
Stator(welding)



186-121
正时齿轮
Timing gear



186-122
平衡轴齿轮
Balance shaft gear



186-123
油开关垫片
Gasket (oil control valve)




186-126
进气管垫片(170、178)外
Gasket(170、178intake pipe)



186-127
进气管垫片(170、178)内
Gasket(170、178 intake pipe)



186-128
箱体垫片 (170) 铝
Aluminum Gasket(crank case)

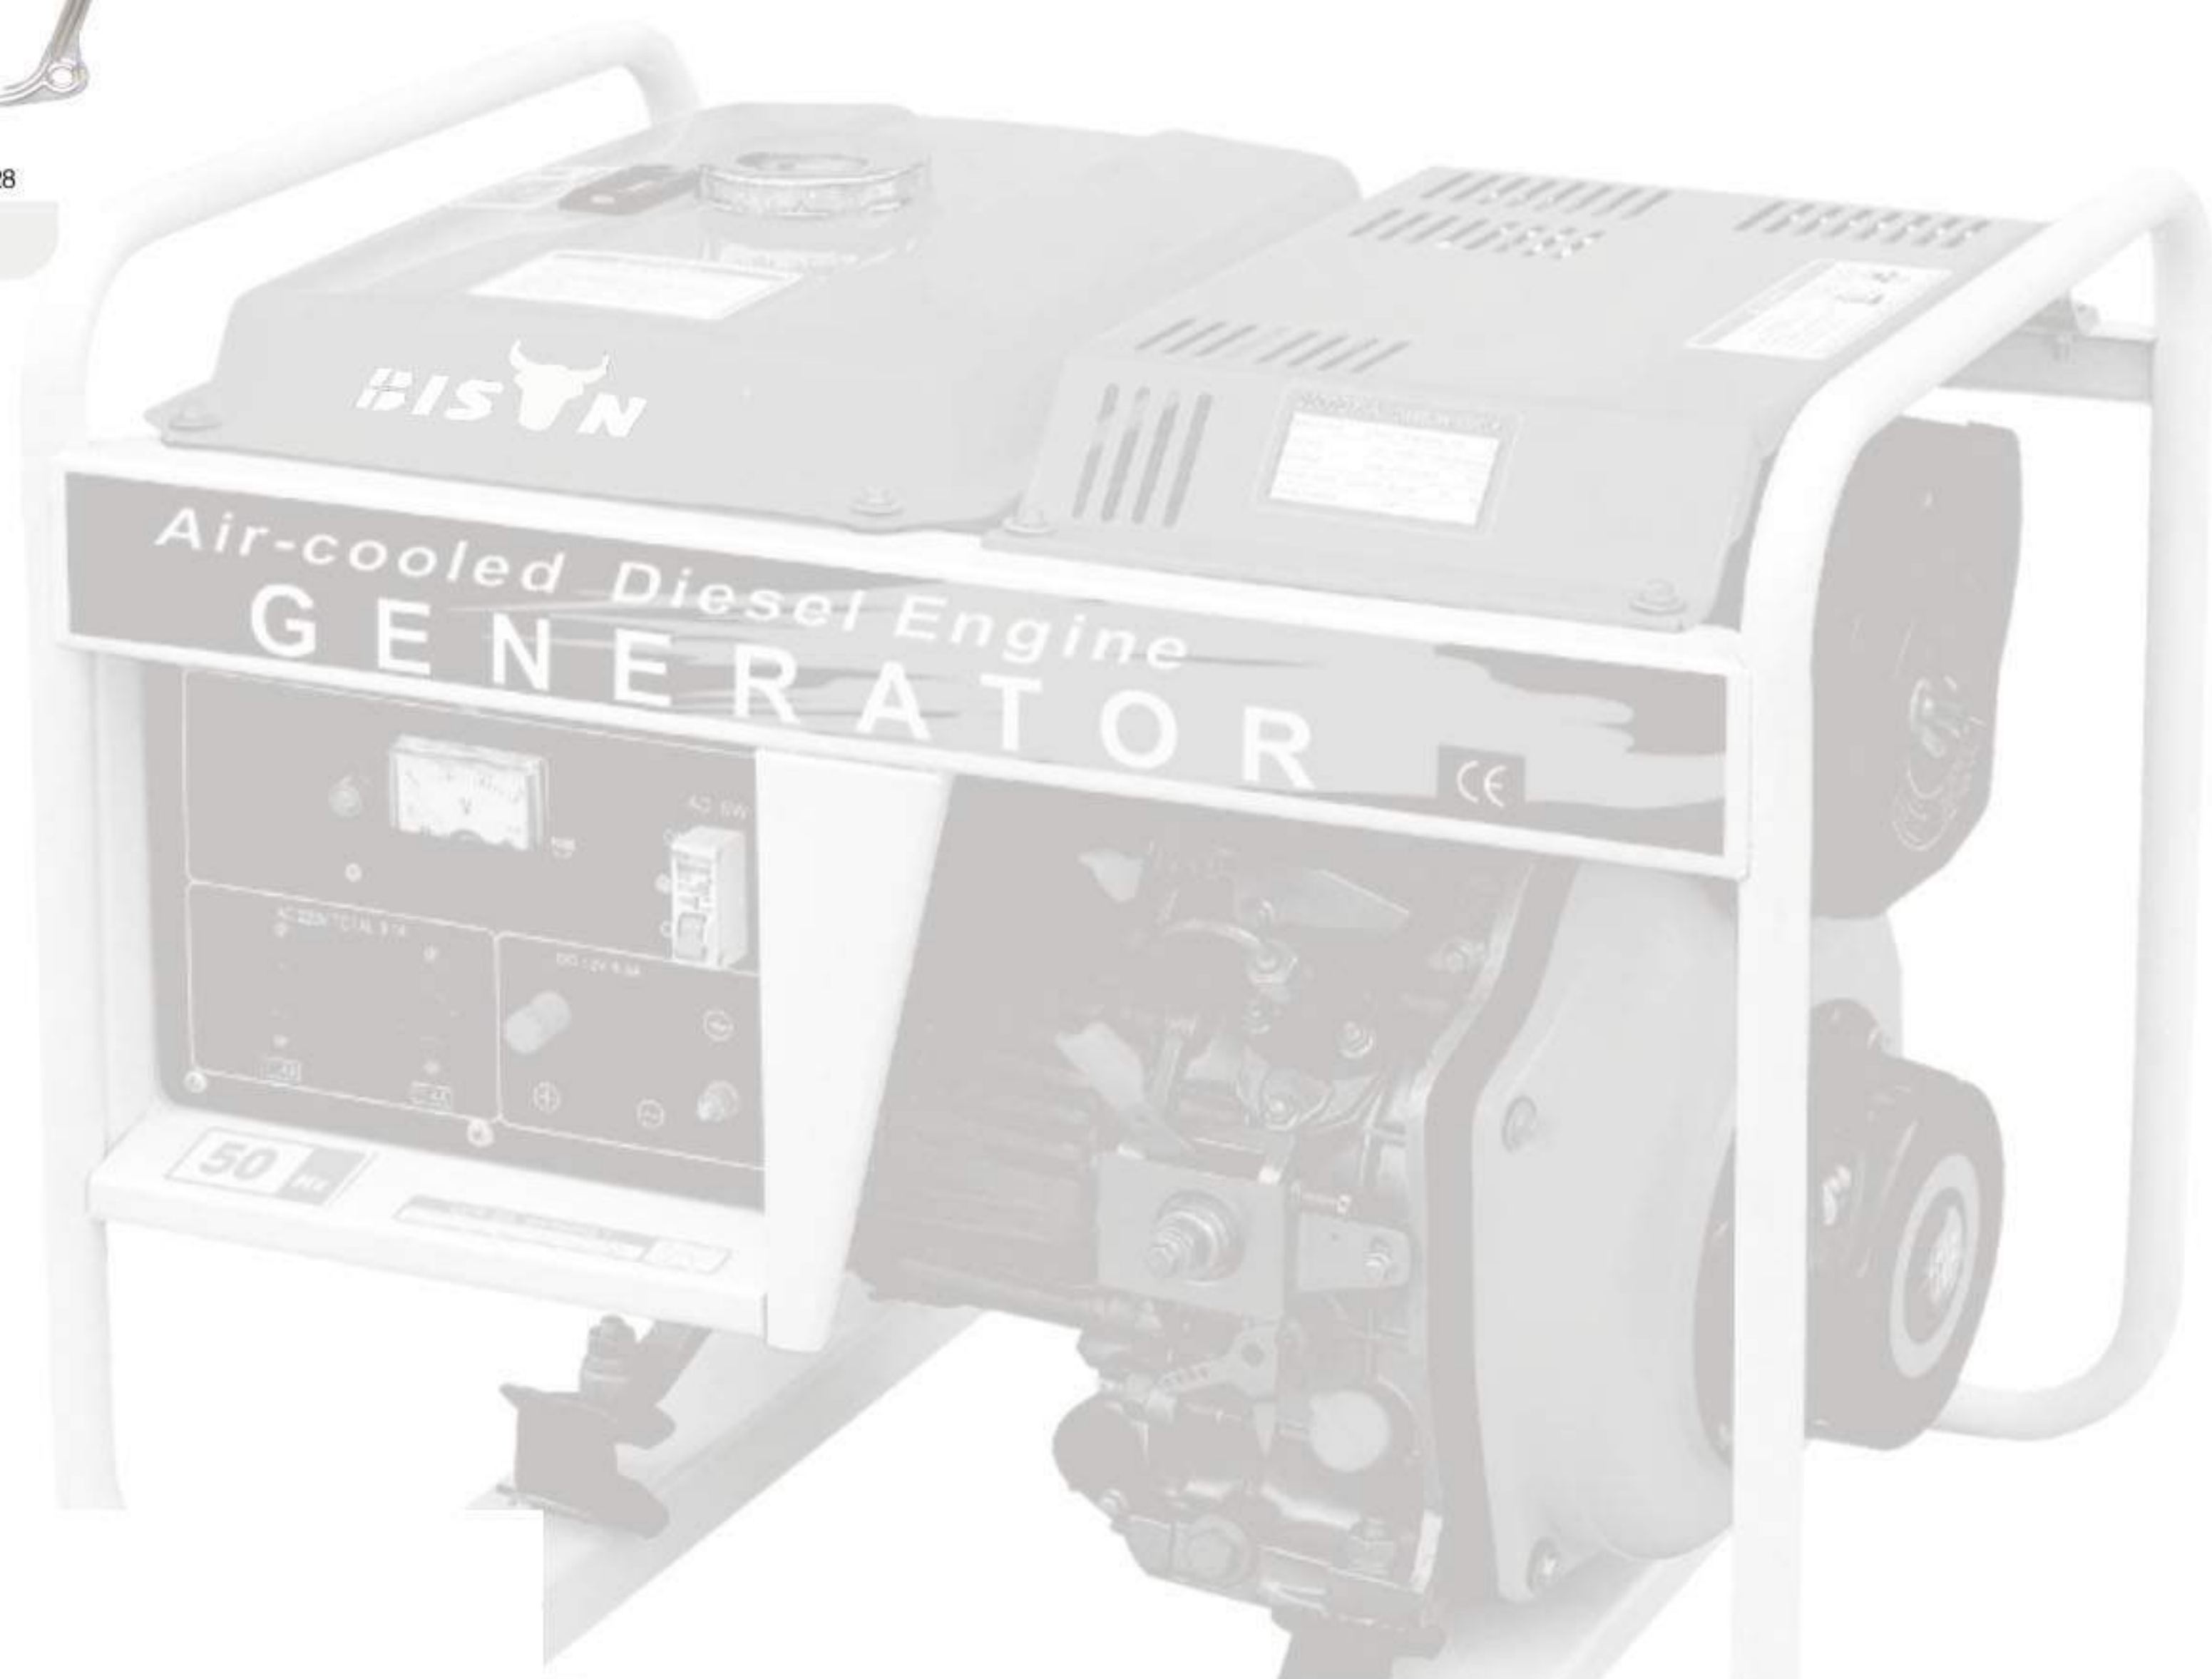

GASOLINE GENERATOR PARTS 汽油发电机面板配件



MB-1

1P断路器
1P breaker



MB-2

3P断路器
3P breaker



MB-3

工业连接器插座(5孔)
Pluscon receptacle(5 holes)



MB-4

工业连接插头(5孔)
Pluscon plug(5 holes)



MB-5

50断路器
50 breaker



MB-6

澳式插座
Australian receptacle



MB-7

国标三极插头
Grade III plug



MB-8

美式4孔插头
American 4-pin plug



MB-9

欧式插座
European receptacle



MB-10

30断路器
30 breaker



MB-11

美式小插座
American receptacle(small)



MB-12

三相电压表
Three phase voltmeter



MB-13

欧式插头
European plug



MB-14

柴油机电门锁
Diesel generator electric door lock



MB-15

汽油机电门锁6线
Gasoline generator electric door lock(6 wires)



MB-16

汽油机电门锁4线
Gasoline generator electric door lock(4 wires)



MB-17

12V保护器
12V Protector



MB-18

钮子开关9脚
Toggle switch 9 feet



MB-19

钮子开关6脚
Toggle switch 6 feet



MB-20

船形熄火开关
Boat-shaped on-off switch



MB-21

整流器
Rectifier



MB-22

美式插头
American plug



MB-23

单相电压表
Single phase voltmeter



MB-24

小美式插头
American plug(small)



MB-25

国标三极插座
Grade III receptacle




MB-26

美式插座
American receptacle



MB-27

英式插头
English plug

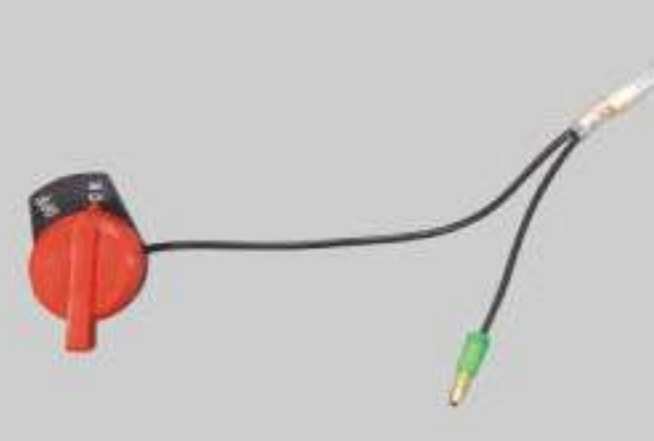

MB-28

水泵熄火开关
Water pump on-off switch



MB-29

保护器
Overload protector



MB-30

熄火开关
on-off switch



MB-31

多功能插座
Multi-function receptacle



MB-32

接线柱
Terminal(black, red)



MB-33

950船形熄火开关
950 boat-shaped on-off switch



MB-34

V型插
V-shaped plug



MB-35

日式插座
Japanese receptacle



MB-36

日式插头
Japanese plug

www.bisonpower.net



FACEBOOK



BISON WEB



WECHAT

台州市椒江柏森机械有限公司

TAIZHOU BISON MACHINERY CO., LTD

公司地址：浙江省台州市椒江区方远电商创业园D幢二楼

电话：0086-576-88205202

传真：0086-576-88017986

邮箱：coco@bisonpower.net

Add: 2/F, Build.D, Fangyuan Business Park,
No.155 West Taihe Road, Jiaojiang,
Taizhou City, Zhejiang Province, China

Tel: 0086-576-88205202

Fax: 0086-576-88017986

E-mail:coco@bisonpower.net